


1

Below the time setting - you have to do it in two places.  
1. Display clock settings (controller internal time):  
a- activates switching from summer to winter time.  
b- sets the appropriate time zone.  
c-set AUTO -blue satellite dish icon shows that GPS is working.

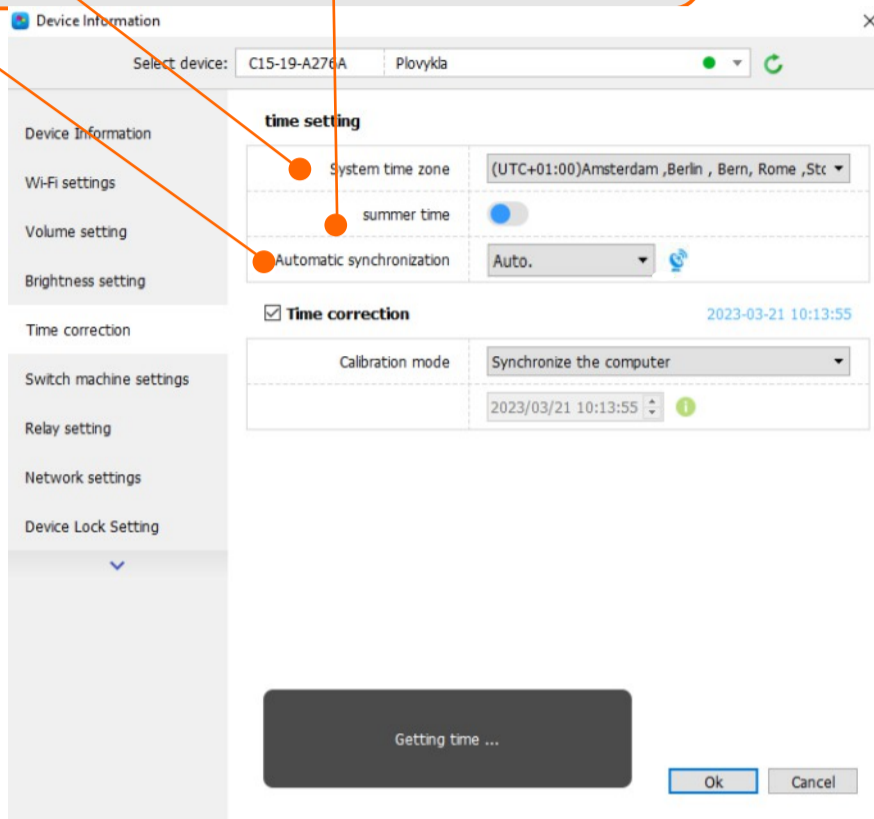

2

Displayed clock settings (what is displayed - separately for each page / clock)  
a-Activate to automatically switch from summer to winter time. b- Set the correct time zone.

