

In the HD player program, set in the Control tab and go to Time Correction: Change the settings in the tabs:

Time zone', change winter or summer time and synchronization from the computer and press OK.

		Device Information		
HDPlayer		Device information		
ile Setting	Control Language Help	Select device	C15-19-A2/6A Plovykla	• • C
Program	Device Information	6 Device Information	time setting	
1	Exporting to U-disk	– Wi-Fi settings	System time zone	(UTC+01:00)Amsterdam ,Berlin , Bern, Rome ,Stc 🔻
1 · · · d	Cluster Sending	Volume setting	summer time	•
Ekran53	Device Lock Setting	Brightness setting	Automatic synchronization	Disabled
> 💽 Star	Brightness Setting	Time correction	✓ Time correction	2023-03-21 10:13:5
> EICZ	Time Correction	Switch machine settings	Calibration mode	Synchronize the computer
> EICZ	Screen Testing	Relav setting		2023/03/21 10:13:55 🗘 🕕
	Firmware Updating	Network settings		
90X90	Play Mode Setting	Device Lock Setting		
	Other setting	~		
	13	5		
			Getting tim	ne
				Ok Cancel

Below is an example of a properly working shutdown at 11:26 and restart at 11:33 It should be borne in mind that at the time of switching off there is no connection with the controller, so if we set the working time by mistake, we have to wait 24 hours for the connection. please do tests for at least 10 minutes.

Davisa Information	☑ Enable the timer switch				
vence information		boot time		Off time	
Vi-Fi settings		00:00:00	* *	11:26:00	\$
volume setting		11:30:00	0	23:59:59	0
Brightness setting		00:00:00	•	00:00:00	
Time correction		00:00:00		00:00:00	
Switch machine settings Relay setting Vetwork settings					
Switch machine settings Relay setting Vetwork settings Device Lock Setting					

Technical Support: tel.94 700 02 88 e-mail:pomoc@ledtechnology.pl



ul. Połczyńska 10c 78-200 Białogard woj. zachodniopomorskie NIP: 6722084883